6gb66031.fm Page 3 Wednesday, April 28, 2004 2:27 PM

INSTRUCTIONS FOR USE

SAFEGUARDING THE ENVIRONMENT

IMPORTANT NOTES

BEFORE USING THE OVEN

INSTALLATION

OVEN ACCESSORIES

CARE AND CLEANING

TROUBLESHOOTING GUIDE

AFTER SALES SERVICE

To make the most of your new oven, read the user's instructions carefully and keep them on hand for consultation in the future.

6gb66031.fm Page 4 Wednesday, April 28, 2004 2:27 PM

SAFEGUARDING THE ENVIRONMENT

Disposal of packaging materials

- The packaging material is 100% recyclable and is marked with the recycle symbol ♺.
- Packing materials should therefore not be thrown away with household rubbish but disposed of as directed by local authorities.

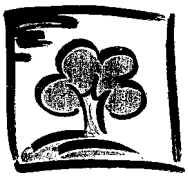

Disposal of old appliances

- The appliances have been manufactured with recyclable or reusable materials. Disposal must be carried out in accordance with local environmental regulations for waste disposal. Before disposing of them make them unusable by cutting off the supply cable.

Energy saving

- Only pre-heat the oven if specified in the cooking table of the Product Description Sheet or in your recipe.
- Use dark, black enamelled baking moulds as they absorb heat very well.

IMPORTANT NOTES

Warning:

- **Accessible parts will become hot when in use. To avoid burns and scalds children should be kept away.**
- **Not intended for use by young children and infirm persons without supervision.**
- **Young children should be supervised to ensure they not play with the appliance.**
- This oven is designed solely for use as a home appliance for cooking food. Any other use is forbidden. The manufacturer assumes no responsibility for damage caused by improper or incorrect use.
- Any repairs or servicing must be carried out exclusively by a qualified technician.
- Never expose the oven to atmospheric agents.
- Do not put heavy objects on the doors because they could damage the oven cavity and hinges. Do not cling to the doors.
- Never hang anything heavy on the oven doors handle.
- **Do not cover the bottom of the oven with aluminium foil or other objects.**
- The oven doors must close properly. The door seals must be kept clean.
- Do not pour water directly into the inside of a hot oven. The enamel coating could be damaged.
- Fruit juice drippings from the baking tray may leave permanent stains. We recommend the oven be cleaned before reusing it.
- Never drag pots and pans across the bottom of the oven to prevent the coating from being scratched.
- Residual condensation after cooking could damage the oven and surrounding kitchen units in time. We recommend that you:
  - set the lowest temperature;
  - cover food;
  - remove food from the oven;
  - dry the wet parts when the oven is cool.
- The front panel and the handle of the oven doors warm up when the appliance is switched on for a long time at high temperatures.
- Never touch the oven with any wet part of the body and do not operate it with bare feet.
- Do not pull the appliance or the power supply cable to disconnect them from the electrical supply.
- **Keep children away from the following elements as they are sources of danger:**
  - the oven and its controls, especially when in operation and immediately afterwards to avoid injury.
  - packaging (bags, polystyrene, metal parts, etc.)
  - an oven to be scrapped.
- Make sure that the electrical cables of other appliances used near the appliance do not touch hot parts and are not trapped in the oven doors.
- Some oven models are equipped with an air cooling system to prevent the front of the oven and cabinet cavity from reaching excessively high temperatures.

Attention: Steam and smoke are vented through an opening located between the control panel and the oven door. Do not obstruct the vent opening.

- Do not place inflammable material in the oven or nearby: a fire may break out if the oven is inadvertently switched on.

- Use oven gloves to remove pans and accessories, when the oven is hot.
- If alcoholic beverages are added when roasting or cooking cakes and sweets (for example, rum, cognac, wine, etc.) remember that alcohol evaporates at high temperatures. It may happen that vapours released by the alcohol can catch fire when they are in contact with the electric heating element.
- Do not heat sealed containers in the oven (except for packages specifically designed for this purpose; see the manufacturer's instructions). The pressure that develops inside the packaging might cause it to explode, damaging the oven.
- Do not use containers made of synthetic material for cooking (except for packages specifically designed for this purpose; see the manufacturer's instructions). They could melt at high temperatures.
- Keep an eye on the oven if you are using a lot of fat or oil. Oil and fat can overheat and catch fire!
- When pulling out loaded shelves, use extreme caution.

BEFORE USING THE OVEN

- Remove the accessories from the ovens and heat them at maximum temperature for about an hour to eliminate the smell of the protective grease and insulating materials. Keep the window open during this operation or provide some other means of ventilation (for example: hood).
- Before using the ovens, remove:
  - stickers on the front and oven doors, except for the rating plate;
  - cardboard protection and protective plastic film from the front panel controls and other parts of the ovens;
  - any sticky labels from the accessories (for example, under the drip tray).

ELECTRICAL CONNECTION

Regulations require that the appliance be earthed

- Connection to the mains must be carried out by a qualified electrician in accordance with the manufacturer's instructions and in compliance with local regulations.
- This appliance must be connected to an a. c. single phase 230V, 50Hz electricity supply.
- The total rated load is 4.400 kW, connect the appliance accordingly.
- Fit an all-pole On/Off switch between the appliance and the power supply with minimum contact separation of 3 mm.

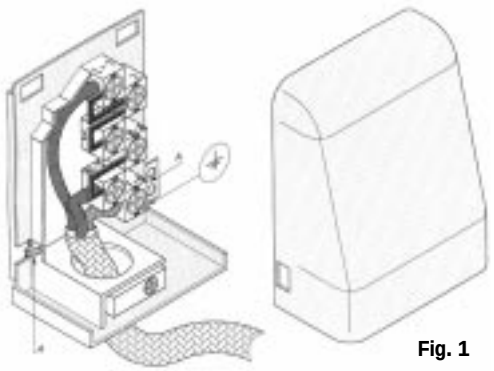

Fig. 1

Connecting the oven to the power supply

- Make sure that the voltage indicated on the rating plate is the same as the mains voltage. The rating plate is on the lower edge of the bottom oven (visible when the door is open).

1. Remove the cover to gain access to the terminal box and insert the power cable (see Fig. 1).
2. Connect the cable to the terminal box, tighten the screws as far as they will go and secure it to the cable fastener (see Fig. 1).

Put the cover back on by inserting the two blades in the slots.

Power supply cable table	
N° of conductors	Type of cable
1N + ⏚ ~	H05 RR-F 3 X 2.5 mm²

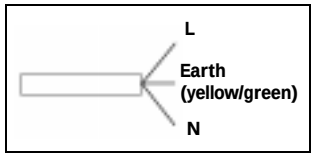

INSTALLATION

This appliance must be correctly installed by a suitable qualified technician strictly in accordance with the manufacturer's instructions.
The manufacturer declines any responsibility for injury or damage to persons or property as a result of improper installation of this appliance.

This appliance is designed for building-in to a standard 600mm wide oven housing.

The housing, adjacent furniture and all materials used in installation must be able to withstand a minimum temperature of 80°C during periods of operation. In addition, adjacent furniture cabinet doors must be at least 3mm from the appliance at all points. Certain types of vinyl or laminate kitchen furniture cabinetry are particularly prone to heat damage and discolouration. Any delamination or discolouration of materials which occurs below 80°C or where materials are less than 3mm from the appliance will be the liability of the owner.
The housing into which the appliance is installed must incorporate a full depth shelf positioned 50mm below the support shelf for the appliance.

For building-in to a tall housing, the installation dimensions are as follows:

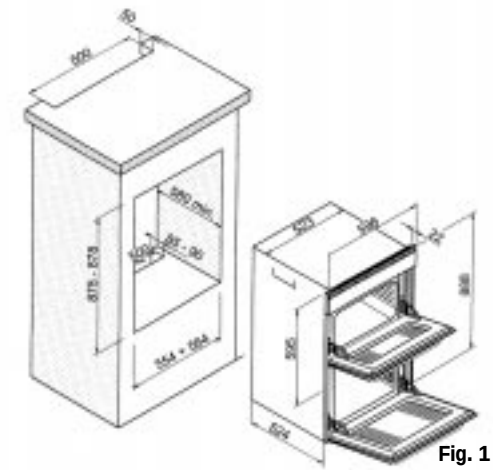

Fig. 1

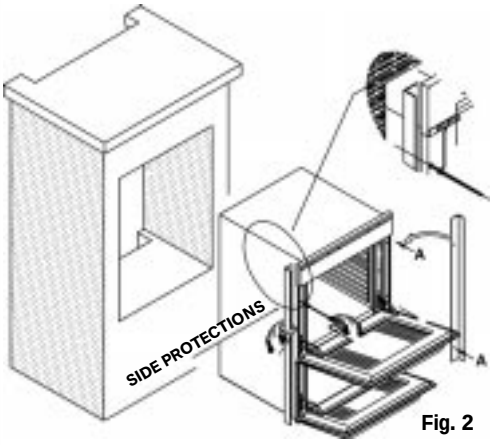

Fig. 2

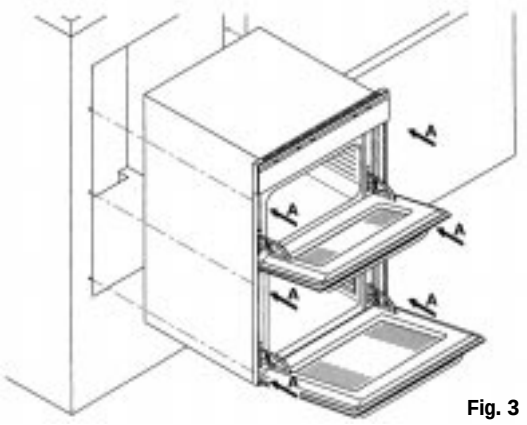

Fig. 3

Important:

When placing the oven in the housing, do not use the oven door as a lever for lifting the oven as damage may result.

Lift the oven using the purpose designed metal handles on the sides and slide it into the housing unit.

Align the oven centrally in the housing unit before securing it.

Once the oven has been positioned in the housing it should be secured in place at the four corners of the oven door frame using suitable screws (see Fig. 3)

OVEN ACCESSORIES

Drip tray (1)
The drip tray is designed to collect fat and food particles when it is positioned under the grid or as a plate, such as when cooking meat, chicken and fish with or without vegetables. Pour water in the drip tray to cover the bottom to reduce smoke and fat spatters.

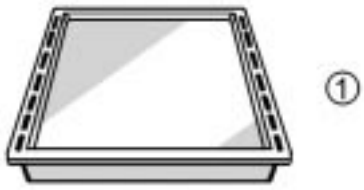

Wire shelf (2)
To be used to cook food or as a support for pans, cake tins or any other cooking container. It can be positioned on any level available.

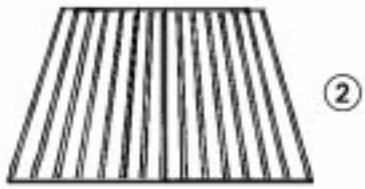

Kit "Grill Pan Set" (3)
The set comprises a grid, to be placed on the drip tray, and one handle.

6gb66031.fm Page 8 Wednesday, April 28, 2004 2:27 PM

CARE AND CLEANING

Important: Do not use water pressure cleaners or steam cleaners.

Exterior of the oven

- Clean with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Wipe with a dry cloth.
- Do not use corrosive or abrasive detergents, which dull the surface. In the event that one of these products comes into contact with the oven, immediately clean it using a damp cloth.
- Slight differences in colour on the front of the appliance are determined by the different materials used, such as glass, plastic and metal.

Accessories

- Soak the accessories in water with washing up detergent immediately after use. Food residues can be easily removed using a brush or sponge.

Oven cavities

- Do not use abrasive cleaners or pan scourers. Use special oven cleaners and follow the manufacturer's instructions.
- After every use, wait for the oven to cool then clean it to prevent the build-up of baked-on food residues.
- With long cooking times or when cooking on different levels, especially food with a high water content (pizzas, stuffed vegetables, etc.) condensation may form on the inside of the doors and the seal. When the ovens are cool, dry the inside of the doors with a cloth or sponge.
- Clean the glass of the doors with a suitable liquid detergent.

Removing the side runner frames

To remove the side runner frame, push it simultaneously down and towards the centre of the oven (**A**-fig.1). Then lift the side runner frame upwards to release it from the cavity wall (**B**-fig.1).

Replacing the bulbs

Warning: Disconnect the appliance from the power supply. Remove the protective glass light-cover by turning it anti-clockwise.

Unscrew the faulty bulb and discard safely, replace it with the new bulb and refit the cover.

Note: use only 25 W/230 V, E-14 type, T300°C bulbs available from After Sales Service.

Removing the oven doors (for cleaning)

To facilitate cleaning inside the oven, the door can be removed as follows:

1. With the door in the fully open position, swivel the catch on each lower arm and clip over the hook on each upper arm (see Fig. 3).
2. Hold the door on each side, then lift to unhook the hinge mechanism and pull outwards to release from the oven.
3. To refit, hold the door in the fully open position and slide the hinge arms into the oven recesses until the arms lock in position. On models with hinge mechanisms as per Fig. 3, release the hinge clips and close the door fully to complete the refitting.

WARNING

- **Take care not to dislodge the hinge lock system when removing the door as the hinge mechanism has a strong spring system!**
- **Use gloves whenever removing, installing or cleaning the oven door.**
- **Do not immerse the door in water at any time.**

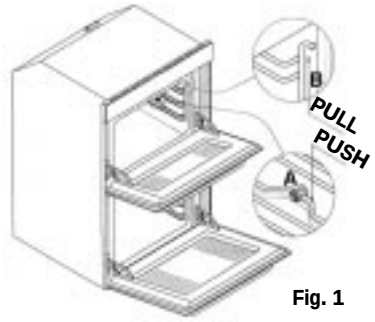

Fig. 1

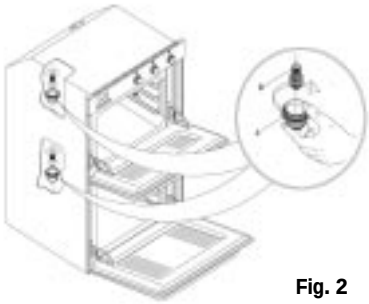

Fig. 2

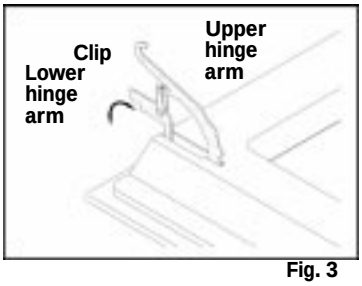

Fig. 3

TROUBLESHOOTING GUIDE

Oven not working:
Check:

- Has the selector knob been set to the required function?
- Has the temperature been set?
- Is there a power failure?

Turn off the oven and restart it to see if the fault persists.

The interior light does not switch on:
Check:

- Is there is a power failure?
- Is the bulb faulty? If so, replace it.

AFTER SALES SERVICE

Before contacting After Sales Service:

1. Try to solve the problem yourself following the points described in "Troubleshooting Guide".
2. Turn off the appliance and restart it to see if the fault persists.

If after the above checks the oven or cooktop are still not working properly, contact the nearest After Sales Service.

Please give:

- A short description of the fault;
- the oven type and model;
- the service number (number after the word Service on the rating plate), located on the lower edge of the bottom oven cavity (visible when the oven door is open). The service number is also indicated on the guarantee booklet;
- your full address;
- your phone number.

SERVICE 0000 000 00000

In the event the oven must be repaired, contact **an authorised After Sales Service,** (use of original replacement parts and proper repair is guaranteed).

Failure to comply with these instructions may compromise the safety and quality of the product.

DECLARATION OF CONFORMITY CE

- **These appliances are intended to come into contact with foodstuffs and they are constructed in compliance with Directive 89/109/EEC.**
- **This appliance is designed to be used for cooking only.**
  Any other use (for example, for room heating) is considered as improper use and potentially dangerous.
- **The appliance was designed, manufactured and sold in compliance with:**
  - **The safety requirements of "Low Voltage" Directive 73/23/EEC;**
  - **the protection requirements of EMC Directive 89/336/EEC**
  - **the requirements of Directive 93/68/EEC.**